





-AHB 0850XX 48H5 - 0850 - Queen Headboard 48"H-




*RECOMMENDATIONS:

- Read instructions before installing
- Keep area clean
- Do not drag the parts
- Do not forget to wear PPE

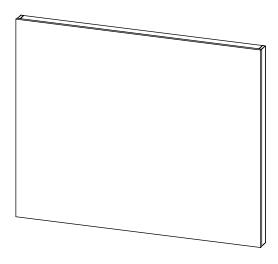

Left Headboard

PARTS TO INSTALL:

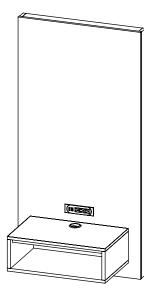


Panel Nightstand



French Wall Cleats

*PERSONAL PROTECTION **EQUIPMENT (PPE)**

- Hand Protection
- Eye Protection
- Waist Support belt

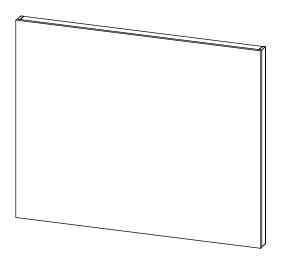

Right Headboard

*Hardware:



Scew









Water level

Measuring Tape Pencil Rubber Hammer Drill


DICKSON FURNITURE MANUFACTURERS

INSTALLATION INSTRUCTIONS


STEP #1

-AHB 0850XX 48H5 - 0850 - Queen Headboard 48"H-


Note: To lift Panel Nightstand (4), Left Headboard (6) and Right Headboard (5) use at least 2 people.

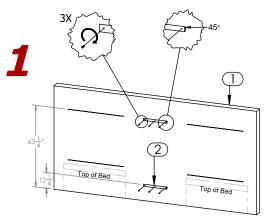


Center platform bed on Headboards wall and mount Center French Wall Cleats (2) on Wall (1) in the middle of both Bed Platforms to a height of 63.25" and 12.25" from floor. Screws go into studs.

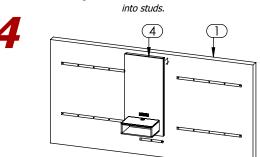


Lift Panel Nightstand (4) higher than Center French Wall Cleats (2) and slowly slide it down until it holds on Wall (1).

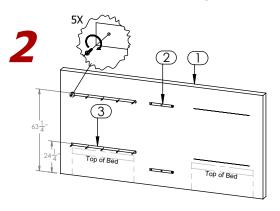

Mount Left French Wall Cleats (3) on Wall (1) away from Center French Wall Cleats (2) to a height of 63.25" and 24.25" from floor. Screws go into studs.

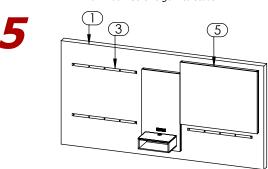


Lift Right Headboard (5) higher than Side French Wall Cleats (3) on the right side of Nightstand (4) and slowly slide it down until it holds on Wall (1).

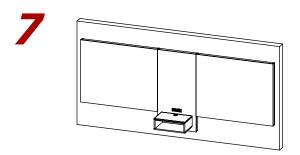


AHB 0850XX 48H5 - 0850 - Queen Headboard 48"H is ready



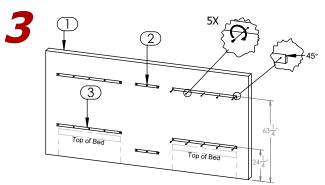

Mount Right French Wall Cleats (3) on Wall (1) away from Center French Wall Cleats (2) to a height of 63.25" and 24.25" from floor. Screws go into studs.

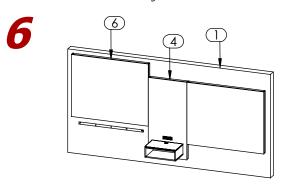

Lift Left Headboard (6) higher than French Wall Cleats (3) on the left side of Nightstand (4) and slowly slide it down until it holds on Wall (1).