




-AHB 0850XX 48H6 - 0850 - King Headboard 48"H-




*RECOMMENDATIONS:

- Read instructions before installing
- Keep area clean
- Do not drag the parts
- Do not forget to wear PPE

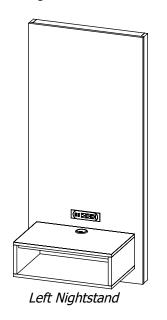

PARTS TO INSTALL:

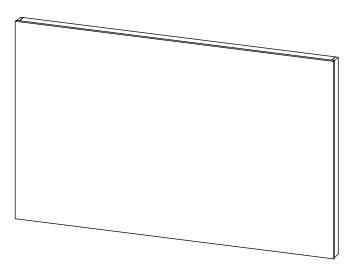

Center Headboard





*Tools:

French Wall Cleats












EQUIPMENT (PPE) - Hand Protection

*PERSONAL PROTECTION

- Eye Protection
- Waist Support belt

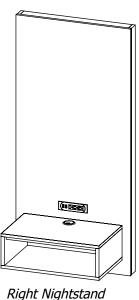

*Hardware:





Measuring Tape Pencil

Rubber Hammer Drill


DICKSON FURNITURE MANUFACTURERS

INSTALLATION INSTRUCTIONS


-AHB 0850XX 48H6 - 0850 - King Headboard 48"H-




Note: To lift Center Headboard (4), Left Nightstand (6) and Right Nightstand (5) use at least 2 people.

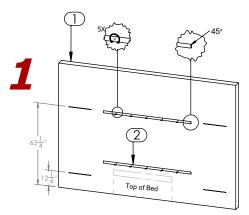


Center platform bed on Headboards wall and mount Center French Wall Cleats (2) on Wall (1) in the middle of both Panels to a height of 63.25" and 12.25" from floor. Screws go into studs.

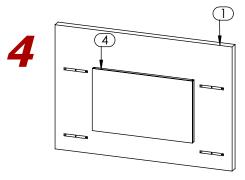


Lift Center Headboard (4) higher than Center French Wall Cleats (2) and slowly slide it down until it holds on Wall (1).

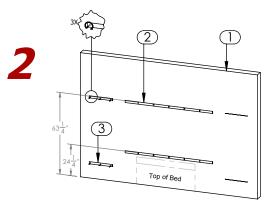

Mount Left French Wall Cleats (3) on Wall (1) away from Center French Wall Cleats (2) to a height of 63.25" and 24.25" from floor. Screws go into studs.

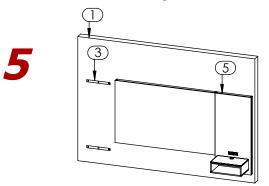


Lift Right Panel (5) higher than Side French Wall Cleats (3) on the right side of Center Headboard (4) and slowly slide it down until it holds on Wall (1)

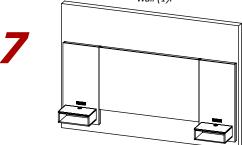


AHB 0850XX 48H6 - 0850 - King Headboard 48"H is ready



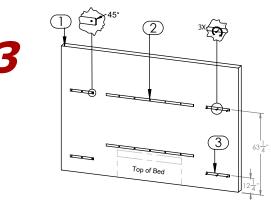

Mount Right French Wall Cleats (3) on Wall (1) away from Center French Wall Cleats (2) to a height of 63.25" and 24.25" from floor. Screws go into studs.

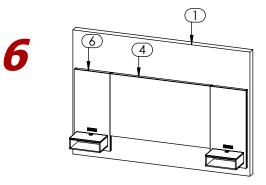

Lift Left Panel (6) higher than French Wall Cleats (3) on the left side of Center Headboard (4) and slowly slide it down until it holds on Wall (1).