


*RECOMMENDATIONS:

- Read instructions before installing
- Keep area clean
- Do not drag the parts
- Do not forget to wear PPE

*PERSONAL PROTECTION EQUIPMENT (PPE)

- Hand Protection
- Eye Protection
- Waist Support Belt



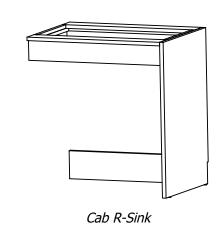

*Tools:









Water level

Measuring Tape Pencil

Drill

*Hardware:









ASSEMBLY INSTRUCTIONS

Note: Assembly can be done with one person.

- AHK 8170XXYY KC57SR - 8170M6 - 57" ADA Kitchen Cab R-Sink -

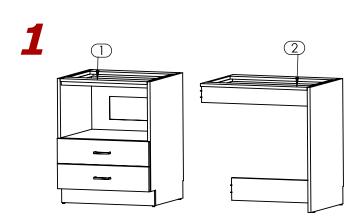

Place Left Pedestal (1) and Cab R-Sink (2) side by side and align them.

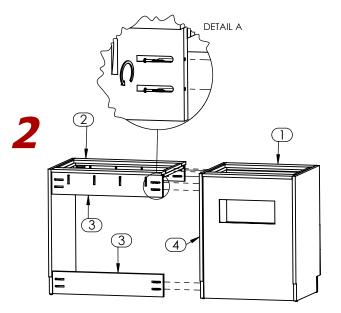

Attach Cab R-Sink Nailers (3), to Left Pedestal right side panel (4) using screws. (Reference Detail A).



ADA Kitchen Cab R-Sink completely assembled

