

### **FRONT VIEW**

### SECTION A-A

| MATERIALS: - HP-Laminate PB-1 1/2 Build-Up" | COMMENTS: - Overall: 60"W x 5 1/2"D x 66"H                                   | TITLE: X-254-RENO AHB 8240XX GSSL - 8240CRS - Go Station Shelf-Left                                     |                              | DICKSON                 |
|---|--|---|------------------------------|-------------------------|
| - Metal Hook (Matte Black) - Color: Wil     | - Color: Wilsonart - 8213K-18 - Phantom Cocoa                                | REVISION DATE:  |                              | FURNITURE MANUFACTURERS |
| - 5 mm Safety Glass                         | Accent City Scheme - Indigo D379-60 Accent Sea Scheme - Charcoal 10592-38    | NOTE: DESIGN AND DRAWINGS ARE PROPERTY OF DICKSON FURNITURE MANUFACTURERS LLC AND MAY NOT BE DUPLICATED | REV                          |                         |
| -   | Accent Sun Scheme - Dove Grey D92-60<br>Powder Coat - Tiger Dry-Lac 38/15018 | OR REPRODUCED WITHOUT THE EXPRESS WRITTEN CONSENT OF DICKSON FURNITURE MANUFACTURERS LLC                | Α                            | SCALE: 1:14             |
|   | - Note: Dimensional Tolerance +/- 1/16*                                      | DIN   | MENSIONS<br>ARE IN<br>INCHES | SHEET 2 OF 4            |

## **IMPORTANT INFORMATION**


- X-254-RENO AHB 8240XX GSSL - 8240CRS - Go Station Shelf-Left -



#### \*RECOMMENDATIONS:

- Read instructions before assembling
- Keep area clean
- Do not drag the parts
- Do not forget to wear PPE


#### **PARTS:**



Headboard

# \*PERSONAL PROTECTION EQUIPMENT (PPE)

- Hand Protection
- Eye Protection
- Waist Support belt



Lower Shelf

#### \*Tools:





Upper Shelf





Water level M

Measuring Tape Pencil

Drill

\*Hardware:



Screw




## STEP #1


# **INSTALLATION INSTRUCTIONS**

- X-254-RENO AHB 8240XX GSSL - 8240CRS - Go Station Shelf-Left -


Note: Side Shelves to be install at site.

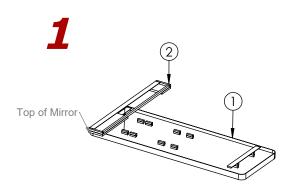

2

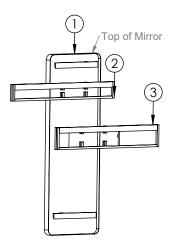


3

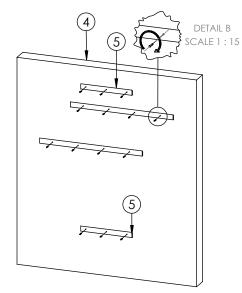


Place the Mirror (1) on the floor and attach Upper Shelf (2) as shown on the drawing, at a distance of 10.5" from the top of the Mirror.

Place the Mirror \( \) upright and attach Lower Shelf \( \) as shown on the drawing, at a distance of 26" from the top of the Mirror.

Mount French Wall Cleats 5 on Wall 4 as shown. Screws go into studs.

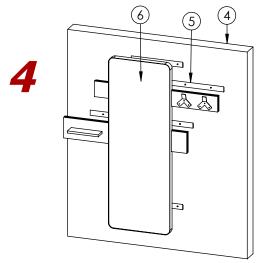

Lift Go Station Shelf 6 higher than Center French Wall Cleats 5 and slowly slide it down until it holds on Wall 4.

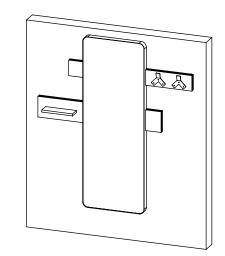

Go Station Shelf Completely assembled.

